

## Filter Housing Cartridges

**Type:** Replacement disposable filter cartridge

**Size:** 10"

**Filtration:** 5 Micron

### Changing Filters:

The frequency at which filters should be changed will vary with water contamination level, but as a guide, filters should be changed at least every three months. Reduced water pressure will indicate that filters should be checked, and changed if necessary. Activated carbon filters should be changed prior to this if efficiency drops, indicating that absorption capability has been used up. After changing activated carbon cartridges, run tap for 5/10 minutes to remove any carbon fines from the system before using water. Run drinking or cooking water taps for at least 1- second prior to using water, particularly if tap is not used daily, and longer if tap has not been used for a week or more.

